


5 Connection of Power cables/Earth wires/Communication cables



- The RS-485 communication cable has polarity. Connect A to A, and B to B. If connected with incorrect polarity, the unit will not work.

■ Power cables/Earth wires/Communication cables

Connect power cables, earth wires, and communication cables to the specified terminals on the terminal block.

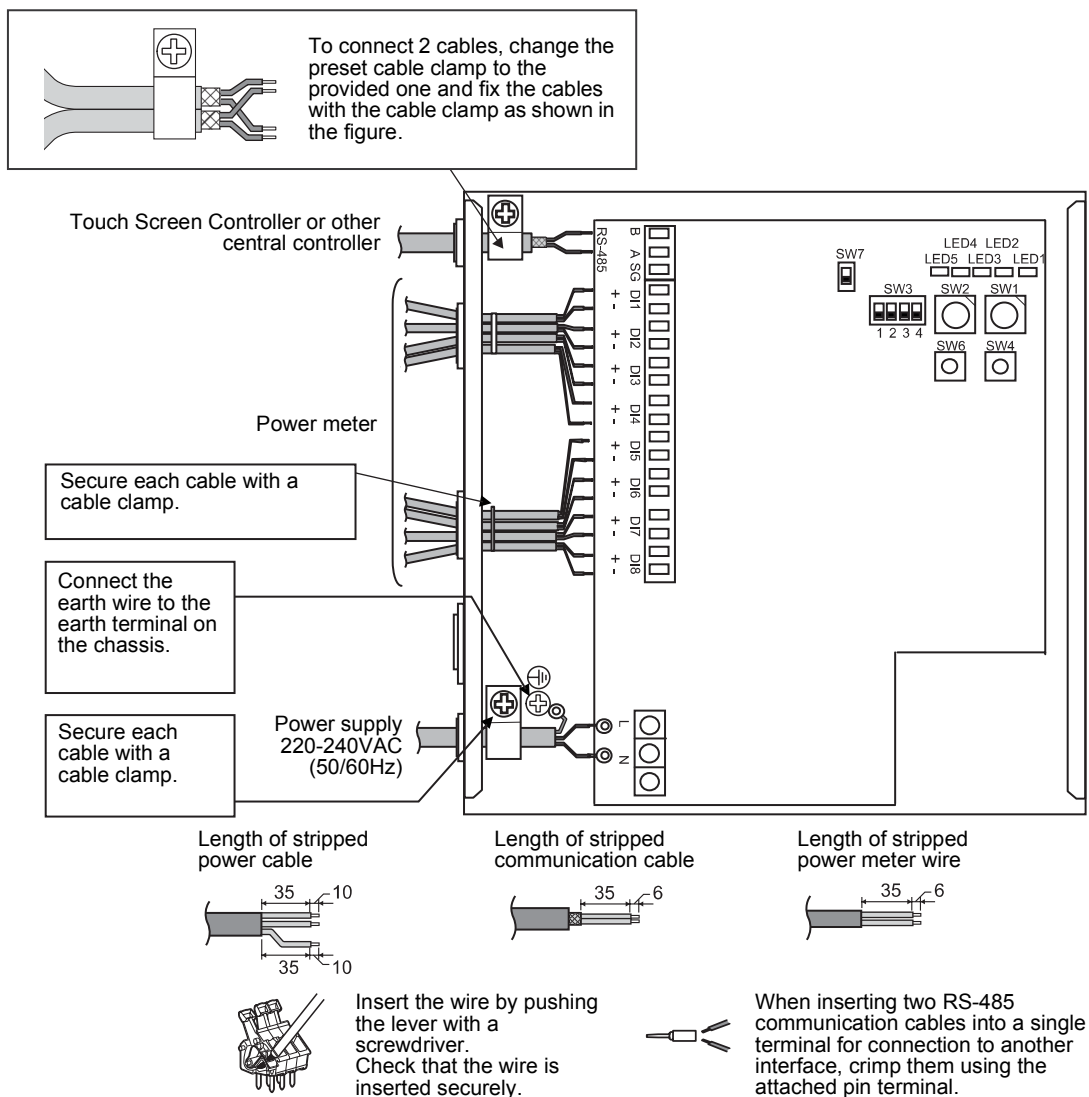

REQUIREMENT

Disconnect the appliance from the main power supply.

This appliance must be connected to the main power supply by a circuit breaker or switch with a contact separation of at least 3mm.

Fasten the screws to the terminal with torque of 0.5Nm.